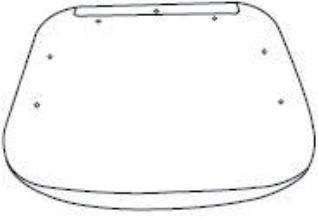
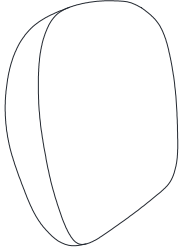
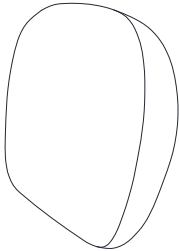
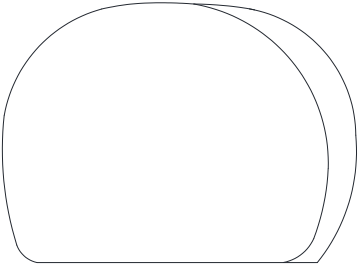
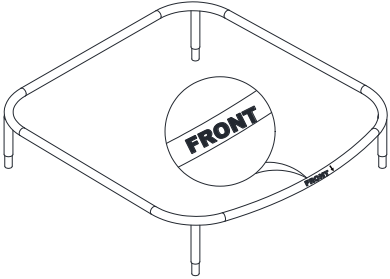
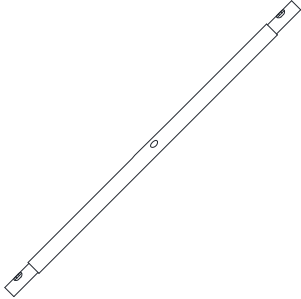
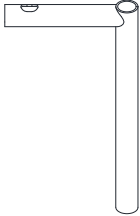
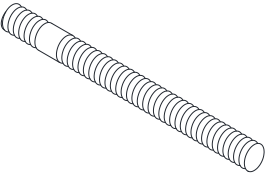










110-000060
ASSEMBLY INSTRUCTIONS

PARTS LIST

A x1  Seat Frame	B x1  Left Armrest	C x1  Right Armrest
D x1  Back	E x1  Metal Frame	F x2  Bar
G x4  Leg		

HARDWARE LIST


1 x7  Bolt M8*120mm	2 x7  Nut M8	3 x7  Spring Washer M8	4 x7  Flat Washer M8
--	---	--	---

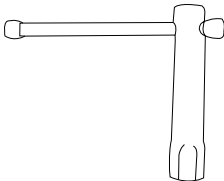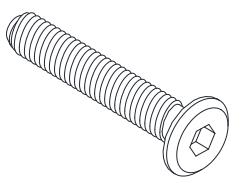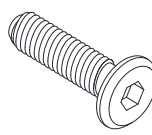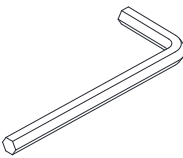5 x1  Wrench	6 x4  Bolt M6*50mm	7 x1  Bolt M6*30mm	8 x1  Bolt M6*25mm
9 x1  Nut M6	10 x4  Plastic Washer		

ASSEMBLY INSTRUCTION


STEP 1

7		x 1
9		x 1
8		x 1

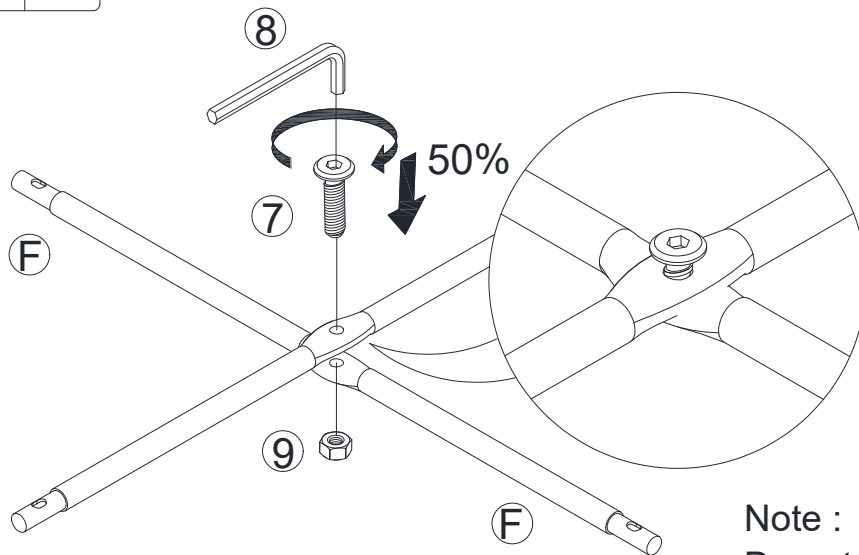


Note :
Do not fully tighten.

STEP 2

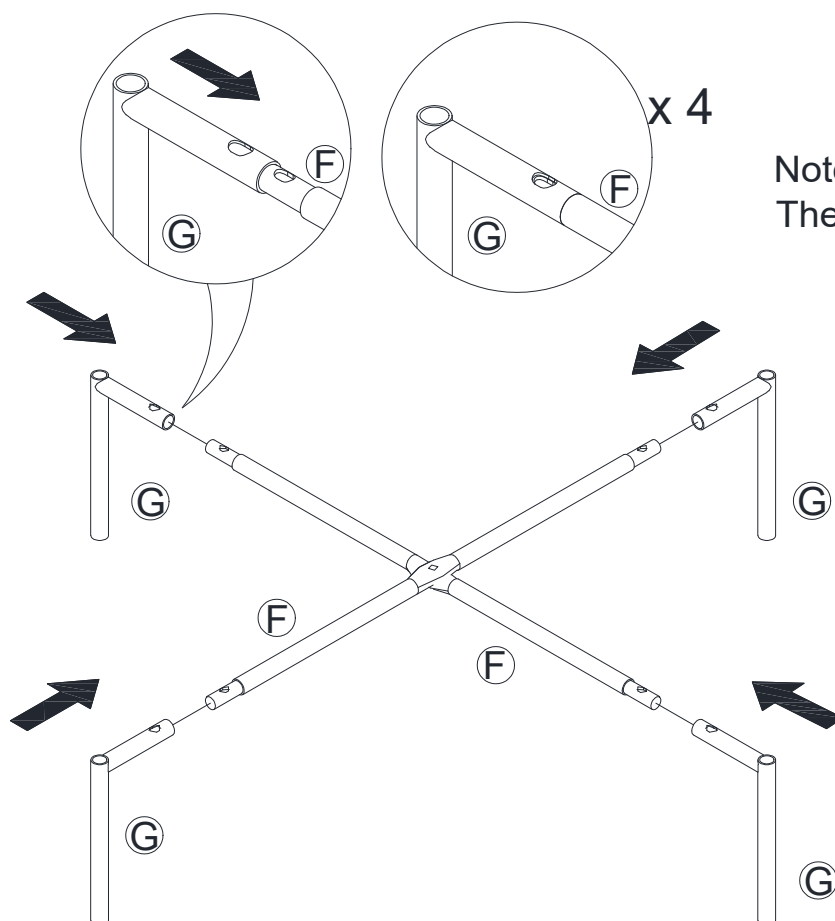


Note :
The holes should be aligned.


STEP 3

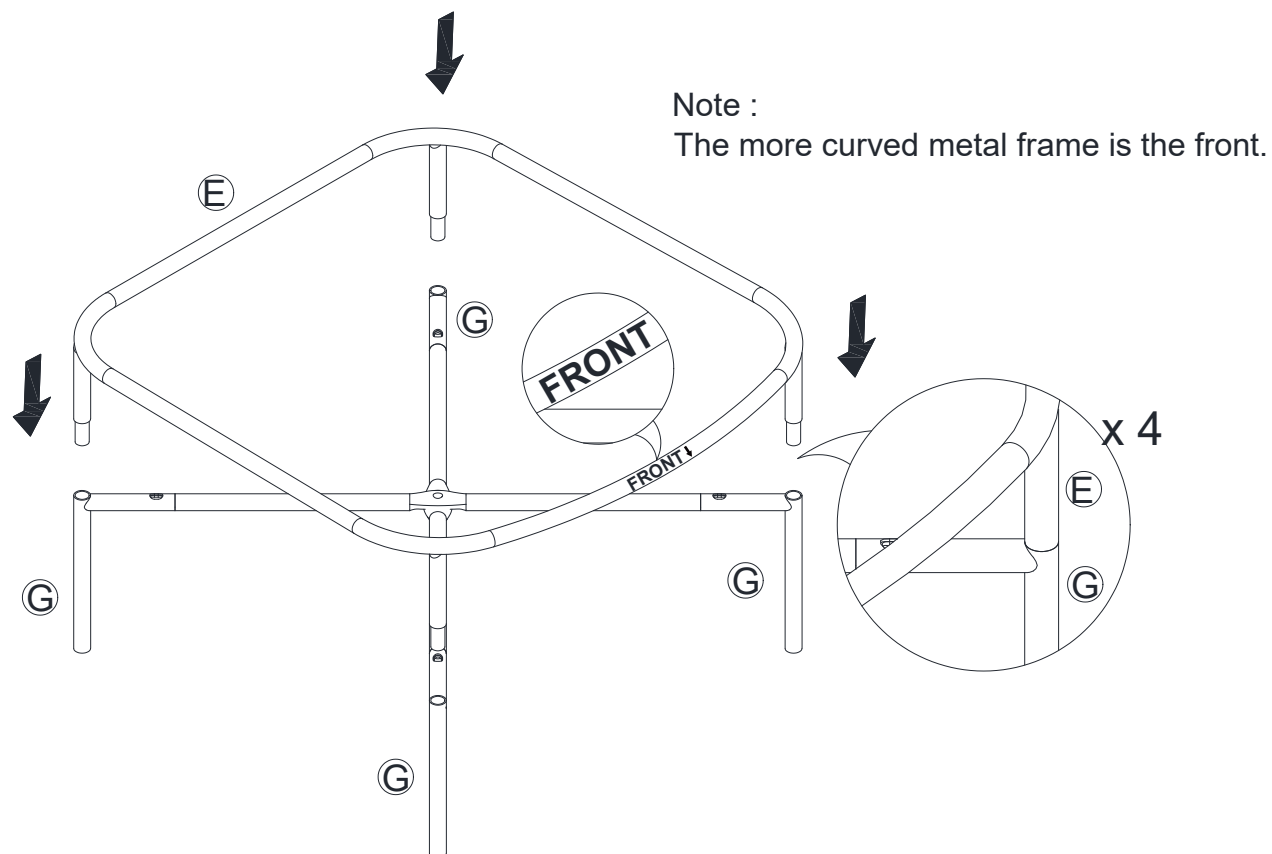

STEP 4



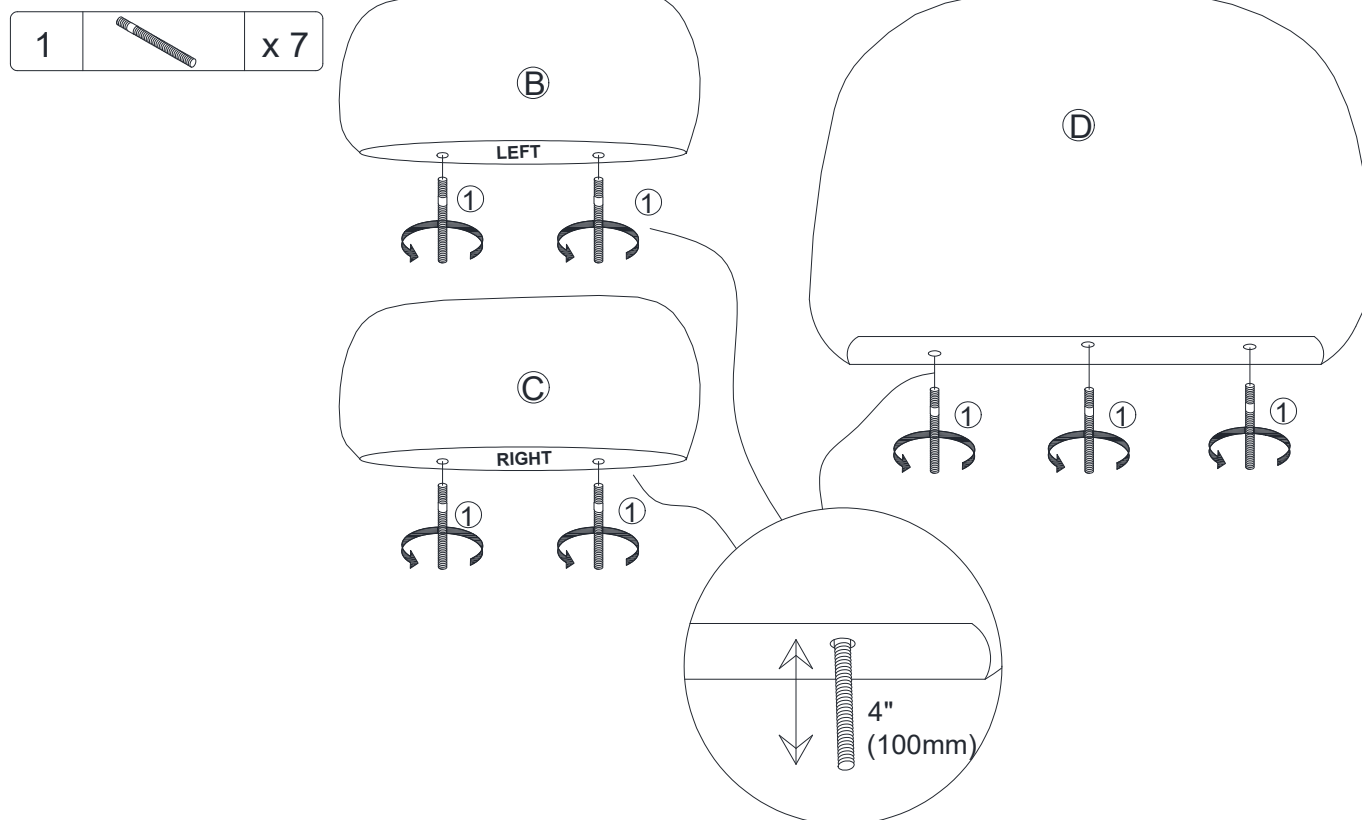


STEP 5

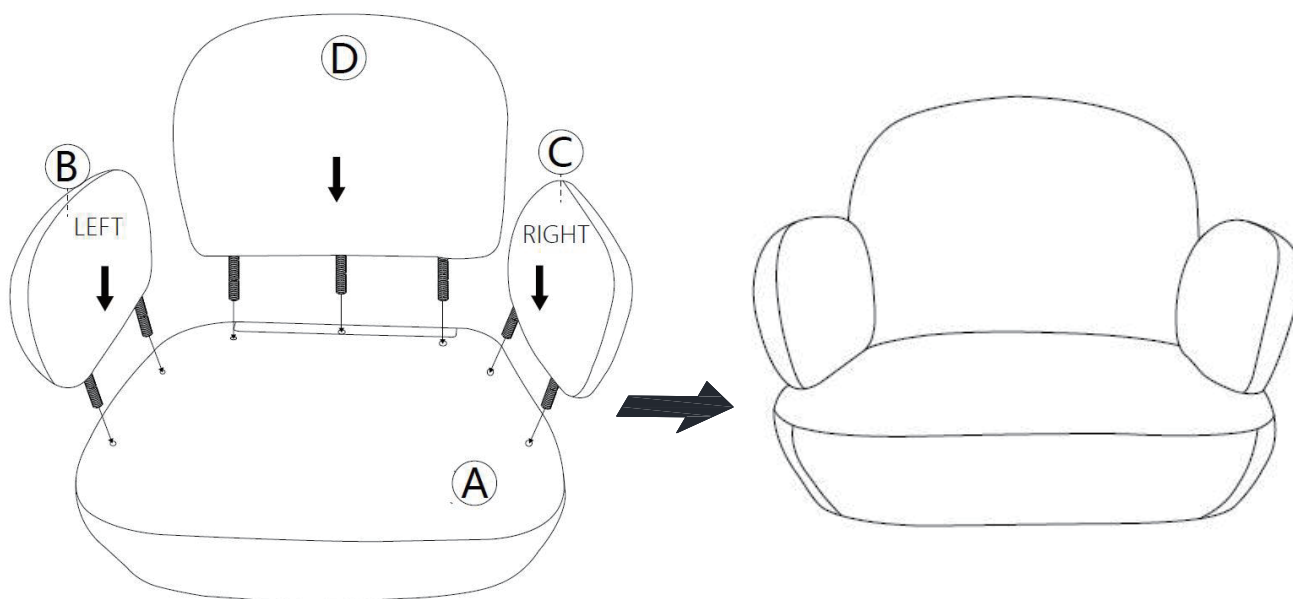

STEP 6


2		x 7
3		x 7
4		x 7
5		x 1

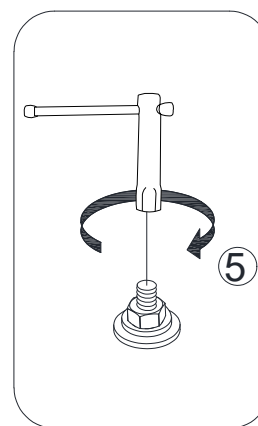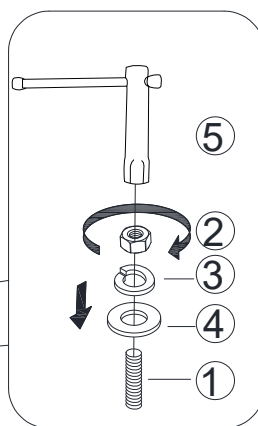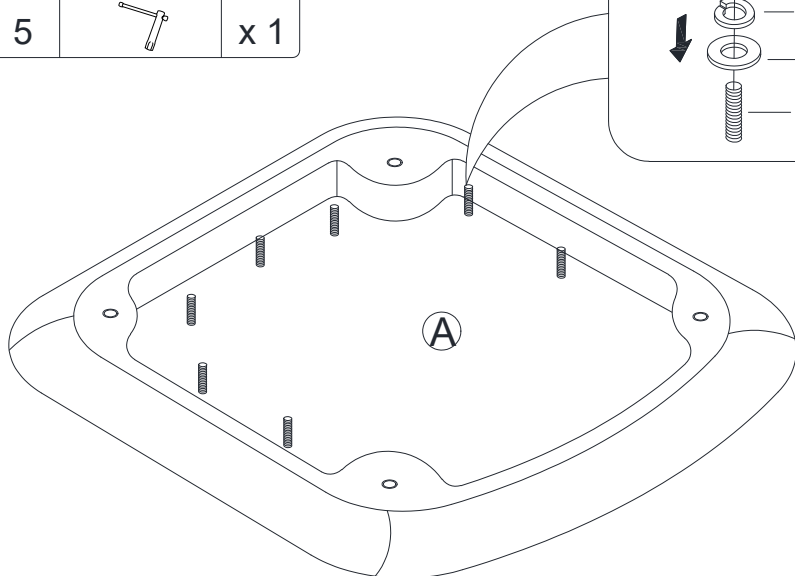

Remark :
Fully tighten the nut in sequence.
After all nut connected.

STEP 7

6		x 4
8		x 1
10		x 4

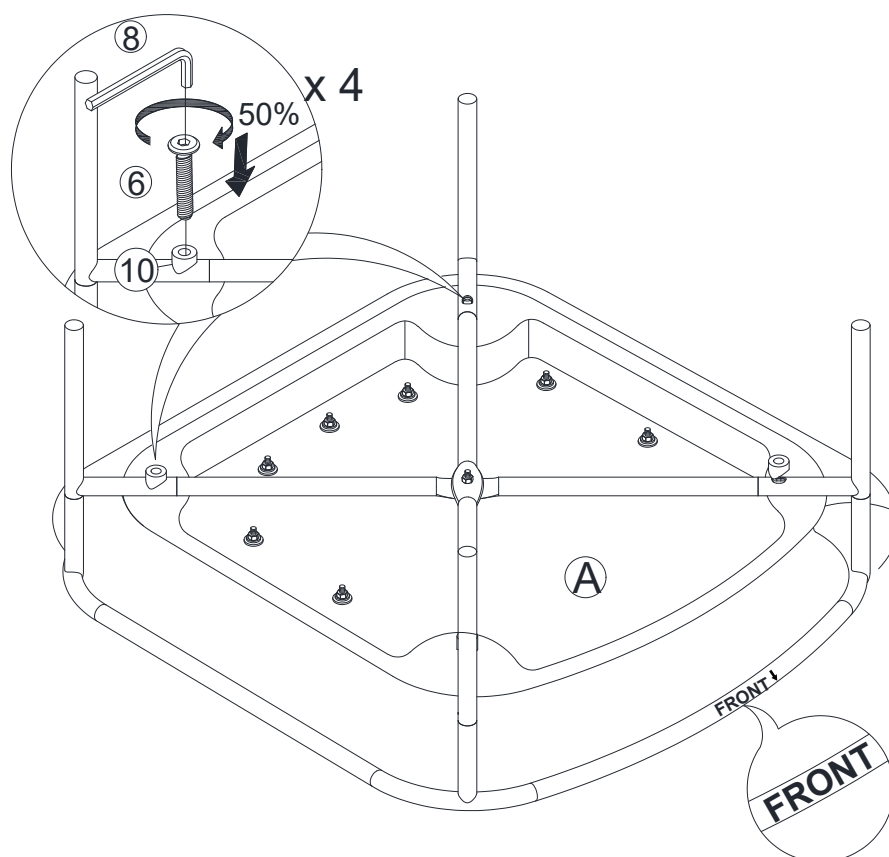

Note :
Do not fully tighten before all screw connected.

STEP 8

Note :
Fully tighten the screws in sequence
after all screws proper connected.

