
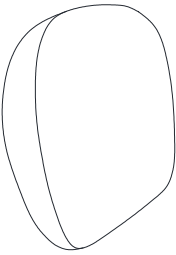
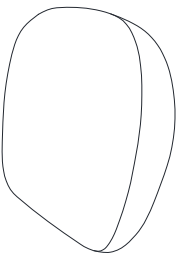
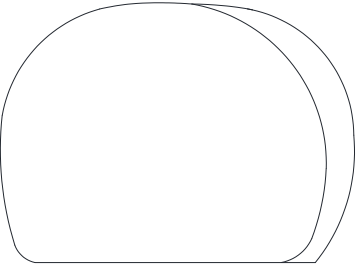
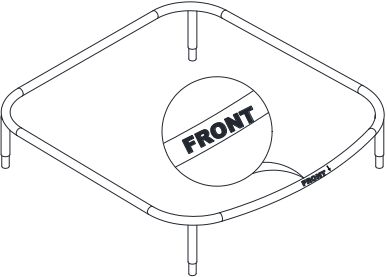
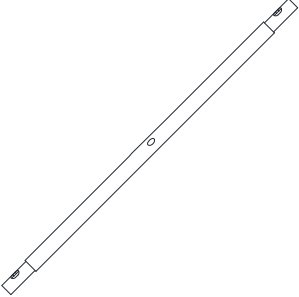
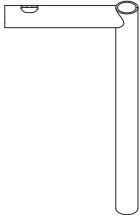
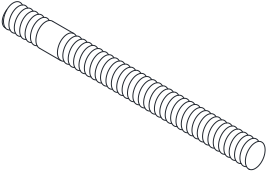



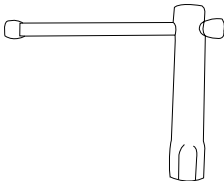
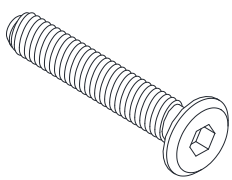
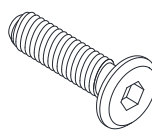
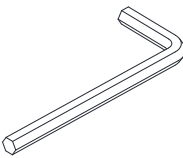




PARTS LIST

A x1  Seat Frame	B x1  Left Armrest	C x1  Right Armrest
D x1  Back	E x1  Metal Frame	F x2  Bar
G x4  Leg		




HARDWARE LIST


1 x7  Blot M8*120mm	2 x7  Nut M8	3 x7  Spring Washer M8	4 x7  Flat Washer M8
---	--	---	--

<p>5 x1</p>  <p>Wrench</p>	<p>6 x4</p>  <p>Bolt M6*50mm</p>	<p>7 x1</p>  <p>Bolt M6*30mm</p>	<p>8 x1</p>  <p>Bolt M6*25mm</p>
<p>9 x1</p>  <p>Nut M6</p>	<p>10 x4</p>  <p>Plastic Washer</p>		

ASSEMBLY INSTRUCTION


STEP 1

7		x 1
9		x 1
8		x 1

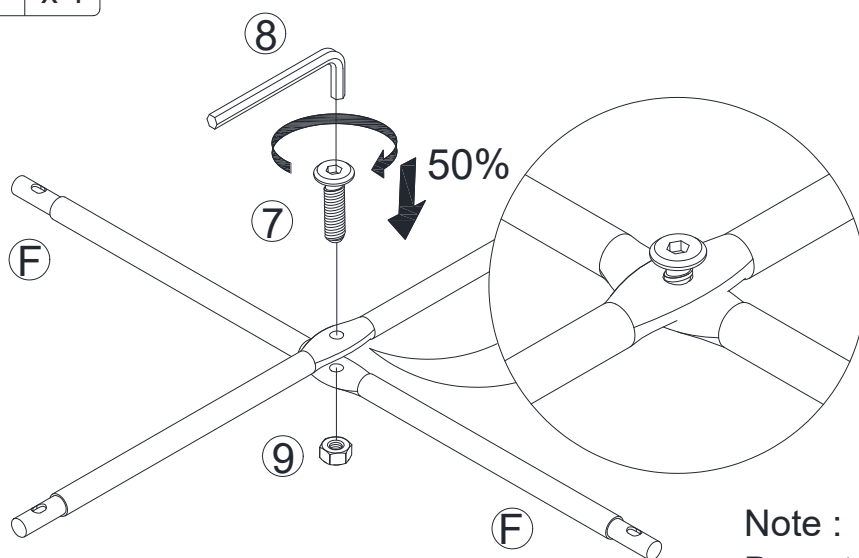


Note :
Do not fully tighten.

STEP 2

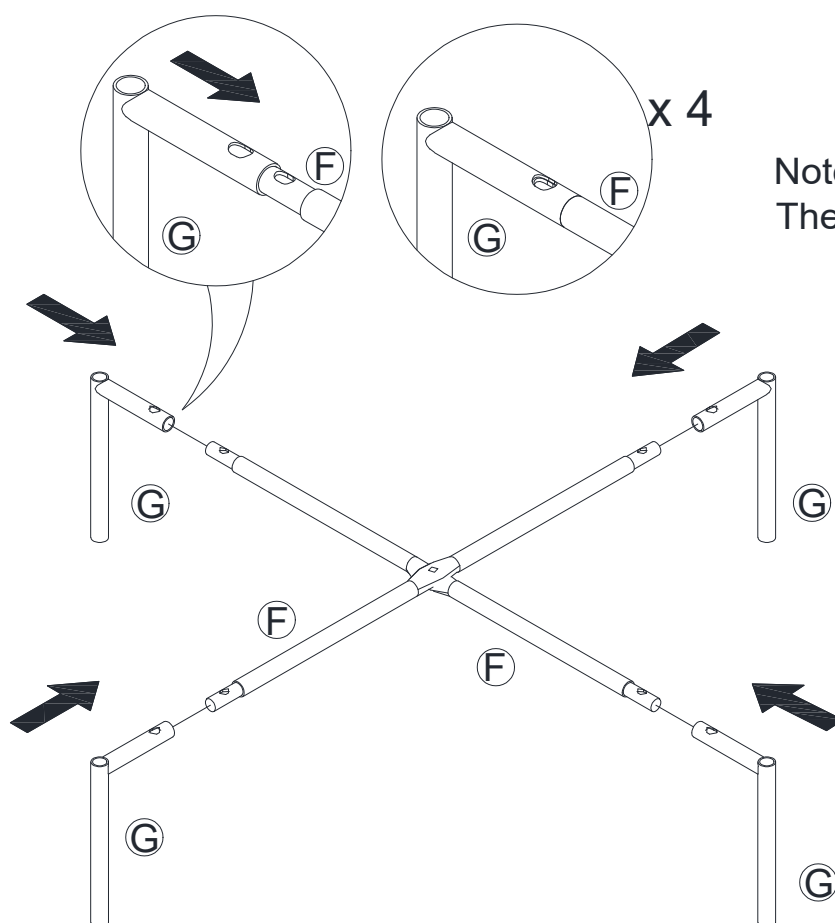


Note :
The holes should be aligned.


STEP 3

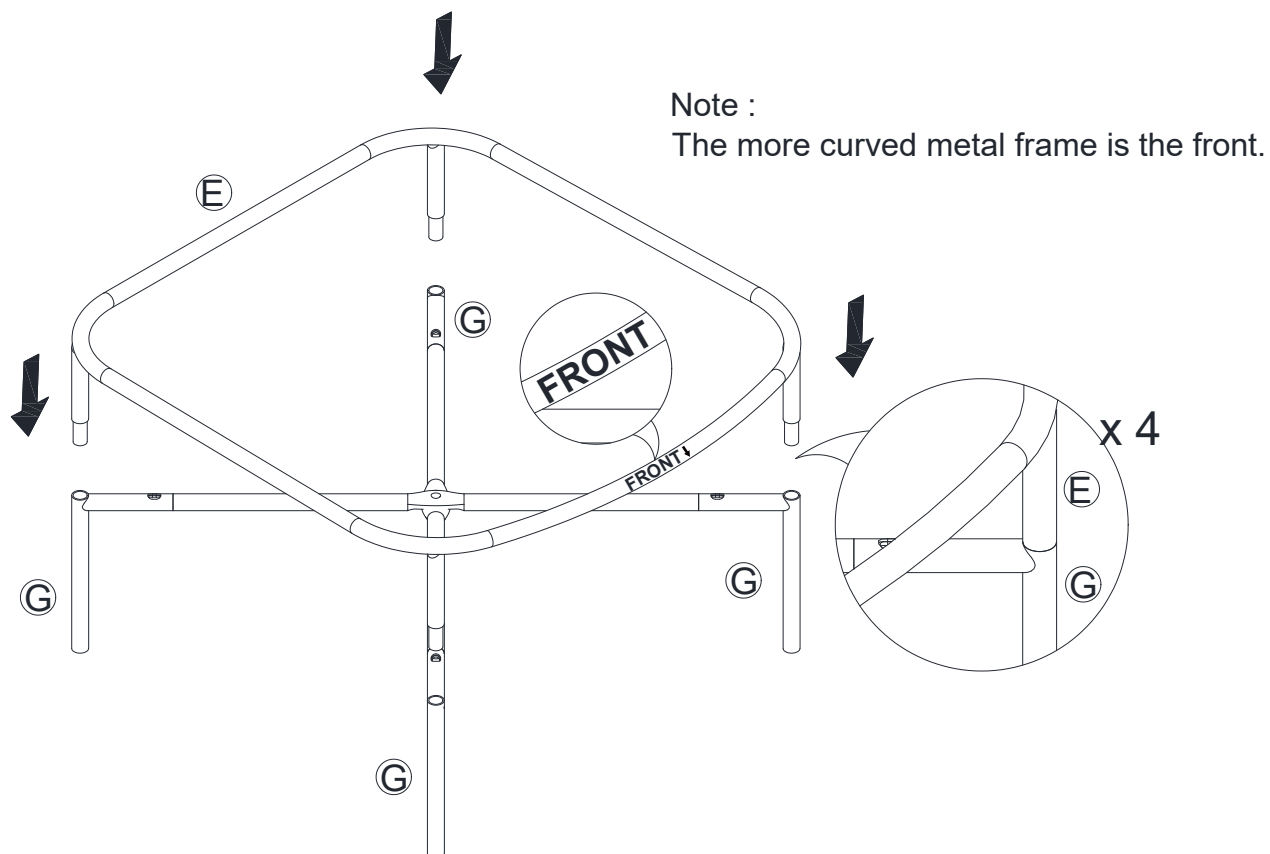



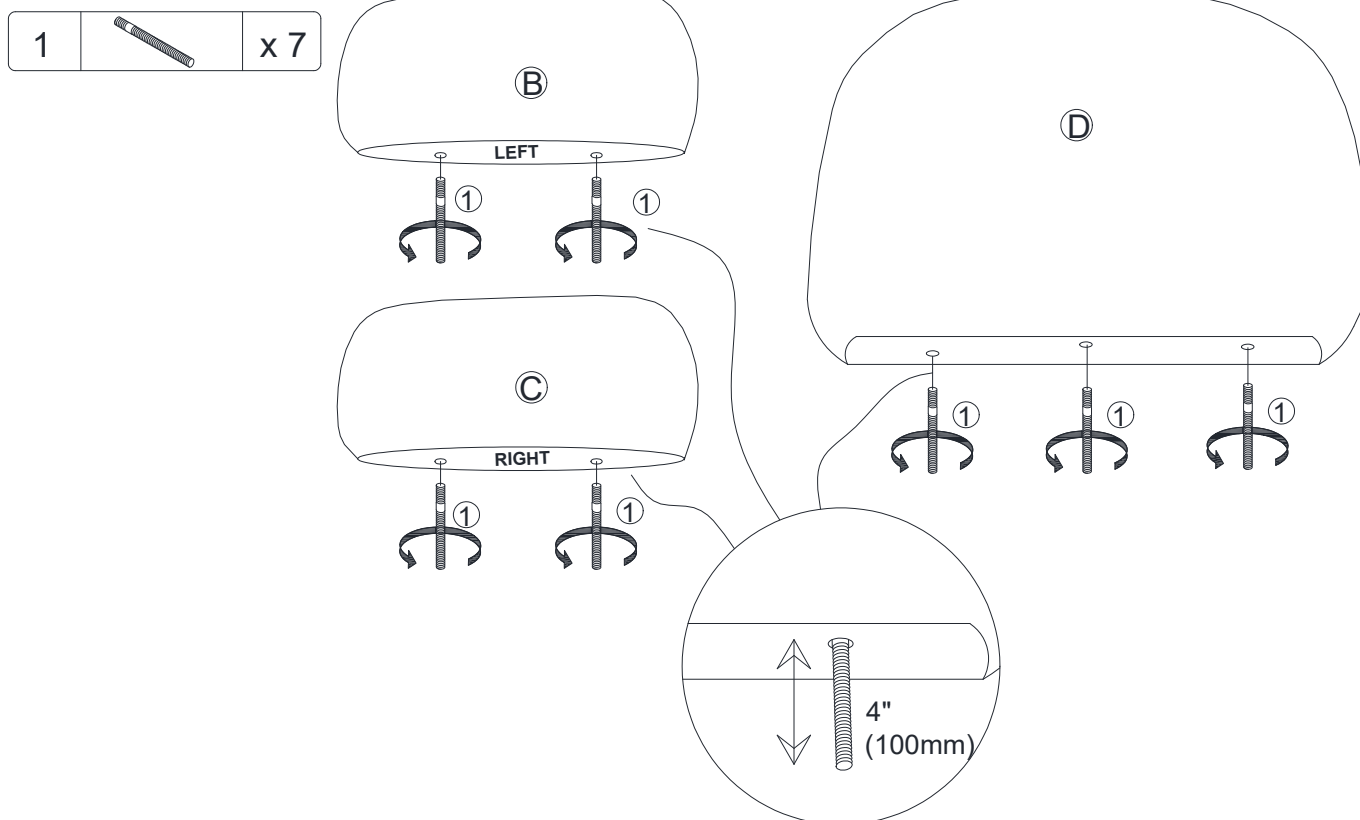

STEP 4



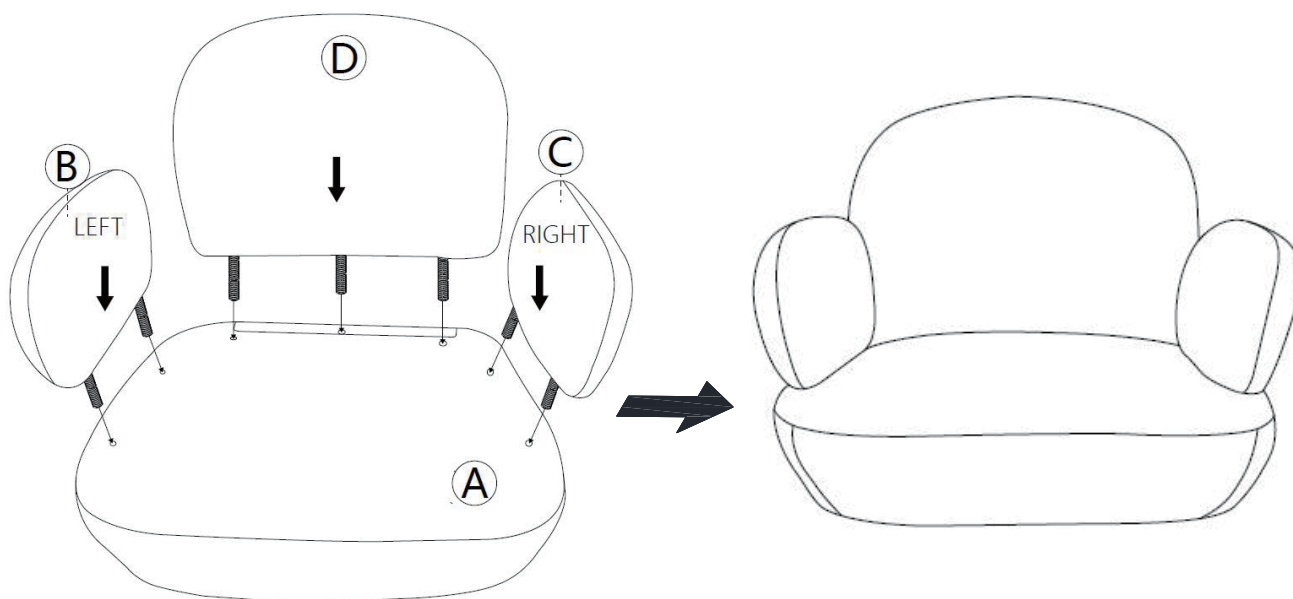


STEP 5




STEP 6

2		x 7
3		x 7
4		x 7
5		x 1

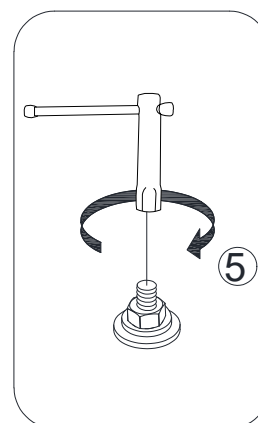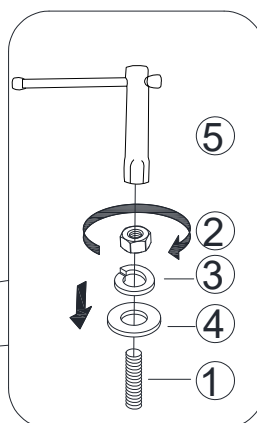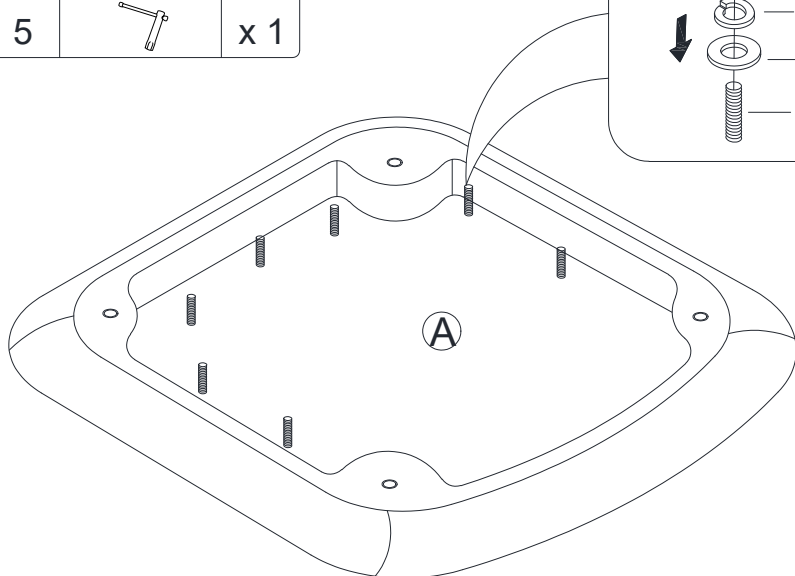

Remark :
Fully tighten the nut in sequence.
After all nut connected.

STEP 7

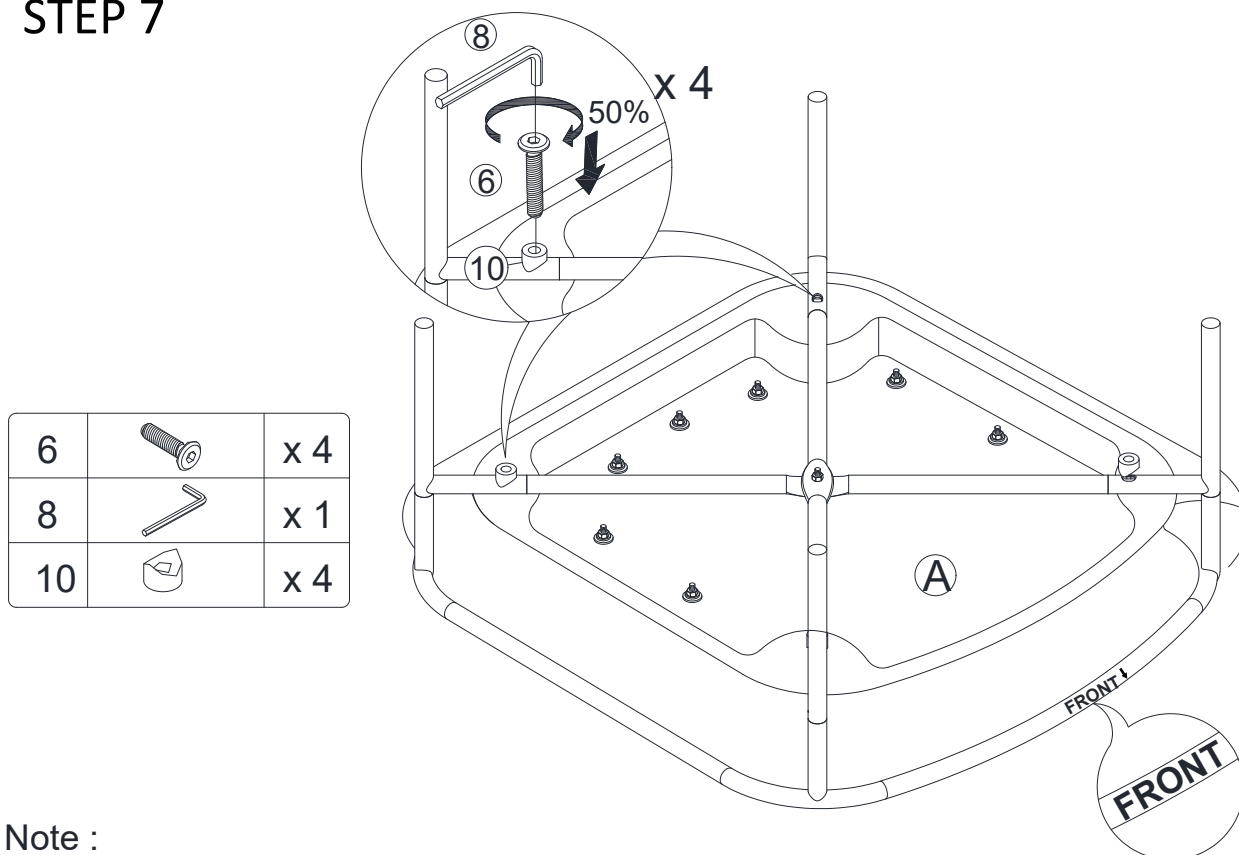

Note :
Do not fully tighten before all screw connected.

STEP 8

Note :
Fully tighten the screws in sequence
after all screws proper connected.

