



Assembling Instruction -293-000001


Step - 1 Put left and Right part together

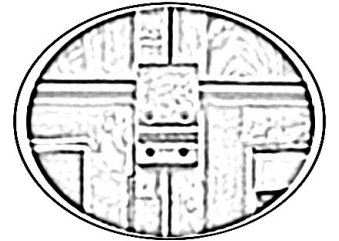

Step - 2 Screw both part together

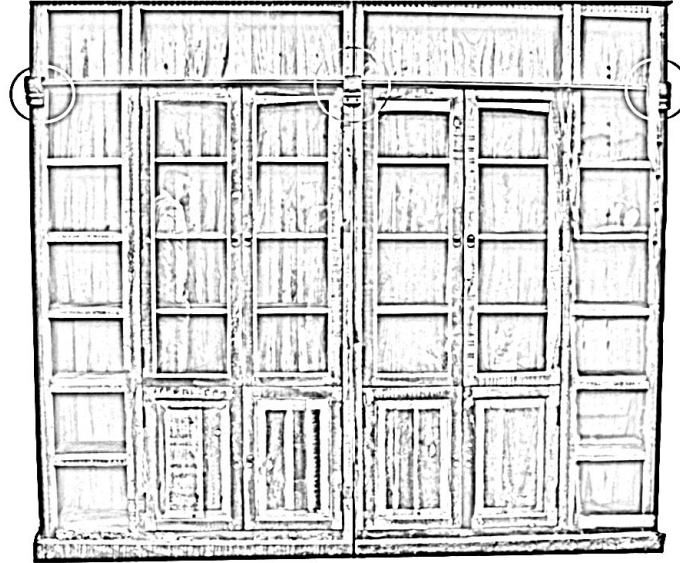

Step- 3 Put upper part on it

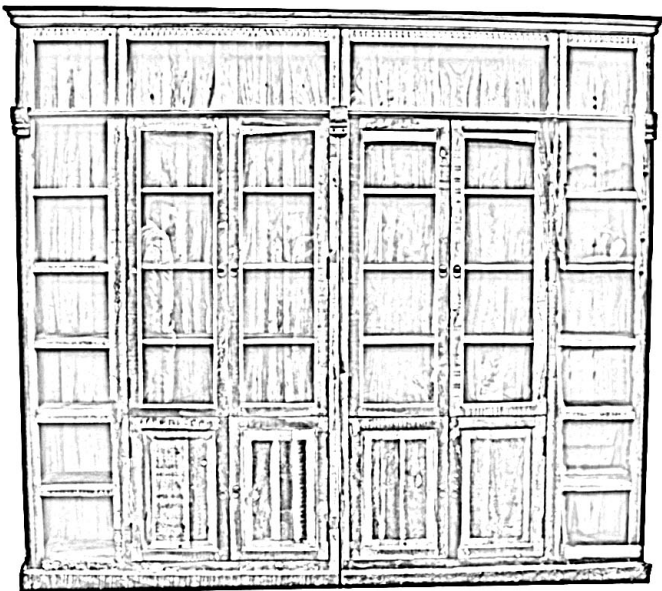

Step-4
Place ladder on Iron Rode

